

# Sprężarka śrubowa 7.5 kw NOWA

[Sprzedam] Pozostałe

Sprężarka śrubowa 7.5 kw NOWA  
23.11.7752  
Cena 19900

INDUSTRY ZELFER  
HV-7.5G Silenced  
Moc silnika 7.5 kW  
Pressure 8BAR  
Rok produkcji październik 2022  
Wydajność 1.1 m3/min

380 volt  
Wyciszenie  
Zbiornikiem 330 litrów,  
Cyfrowy panel sterowania  
Falownik do zarządzania silnikiem  
Regulowane ciśnienie do 10 barów,  
Nowy  
Przepraci 0 godzin

BOLTECH Sp.z.o.

Powyższa oferta ma charakter informacyjny i nie stanowi oferty handlowej w rozumieniu art. 66 §1 Kodeksu Cywilnego i może zawierać błędy.



### Informacje dodatkowe

Brak

### Adres ogłoszenia

<https://maszyniczesci.pl/sprezarka-srubowa-75-kw-nowa,o8969>

### Kontakt

Mail: [boltechwood@gmail.com](mailto:boltechwood@gmail.com)  
Telefon: 509 020 499

### Lokalizacja

- (Polska)

Ogłoszenie dodano: 2024-08-26 01:01:51  
Ogłoszenie wygasa: 2025-08-26 01:01:50









The air compressor unit should be operated by fixed personnel, and the operator should read and understand this instruction thoroughly. The contents of the manual, follow the working procedures and safety precautions and maintenance of the manual specification.

When starting the machine for the first time or changing the power cord, you must pay attention to the direction of the unit and the fan. Is it running in the direction indicated by the arrow.

Operators who work near the compressor for long periods of time must wear earplugs.

Compressed air and electrical appliances are dangerous, and should be confirmed during inspection or maintenance. The power supply has been cut off, and hang "repair" or "prohibit closing" at the power supply. Warning sign to prevent others from being hurt by closing the switch and sending electricity.

Avoid body contact with hot fluids, hot surfaces, and exhaust pipes to avoid burns.

The air compressor should be placed in a place with good lighting and ventilation and a clean environment. Before starting the machine, please add the special oil for screw compressor to the specified line level of the oil eye of the oil and gas separation barrel.

If it has not been used for a long time, about 1.5 liters of special lubricating oil should be added from the suction port of the compressor. And turn the air compressor several times by hand.

Connect the power wire and ground wire to the terminals A, B, C and N of the electric control box, check the compressor. Whether the steering is as indicated by the direction of the red line arrow on the casing, if the steering is opposite, please turn the three. Any two of the power supplies can be swapped. Compressor steering must be correct, otherwise the compressor will be damaged!

After starting the machine, check and record the voltage, current, exhaust pressure and exhaust temperature every 2 hours. Check whether the oil level and oil level on the oil eye are normal, and provide reference for future maintenance.

Spilled lubricating oil and other flammable and explosive materials should be cleaned immediately.

The air compressor cannot work under the exhaust pressure higher than that specified on the nameplate, otherwise it will cause electric shock. The machine was overloaded and burned out.

The spare parts of the air compressor must be provided by the original factory, and the screw oil must be specified by the company. Special oil for fixed screw air compressor, and two different brands of oil are strictly prohibited to use, otherwise it will cause the system to accumulate coke and cause serious accidents.

### Maintenance Schedule

Check item	every day	weekly	500 hours	every 3000 hours	every 6000 hours
Self-inspection/Pressure					
Compressor special oil					
Oil and gas barrel level					
Check the machine and filter					
Cooler cleaning					
Oil					
Air filter element					
Air filter element					
Oil and gas separator oil					
Water grease					
Pressure of electric control					
High-pressure oil leakage					

■ Check processing   
 ■ Over adjustment   
 ■ Must be repaired



**ZELFIR**  
... SILENCED

**COMPRESSOR**